




Installation of the Optional (2nd) Front Tractor assembly for T28x0 or LA28x0 Printers

Power off the Printer and then raise the front cover and remove the bottom cover.

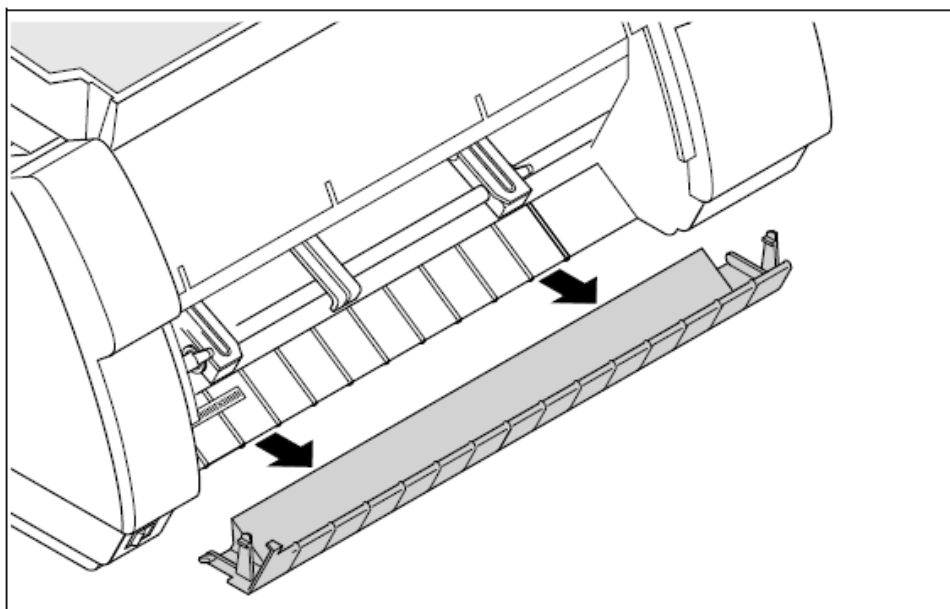

The installation of the optional Front tractor must be performed with the gear of the tractor assembly on the right side. Insert Tractor 2 into the rails on the left and right side walls (as outlined below), in parallel, until the Tractor assembly stops when engaged.

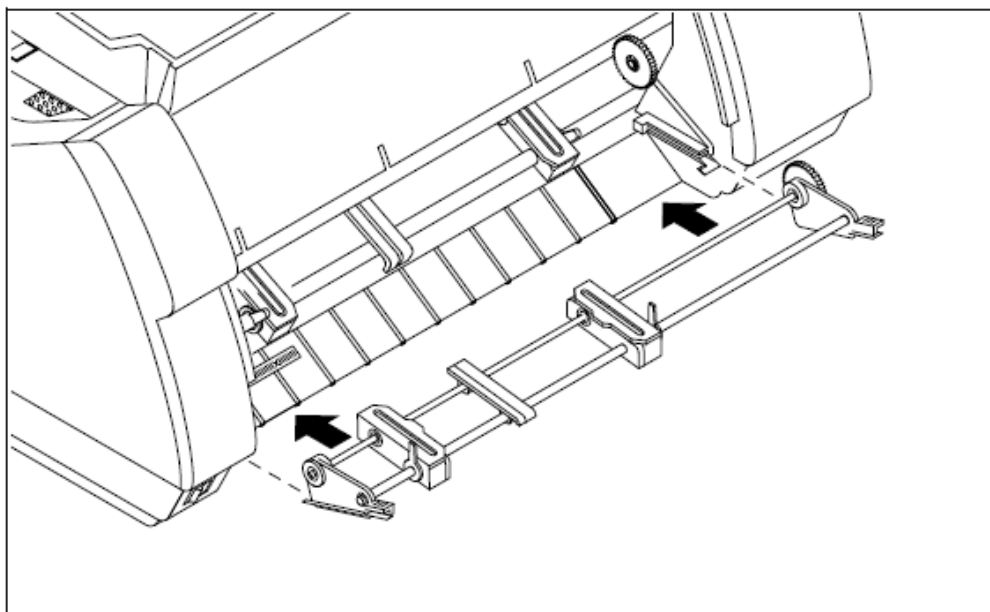

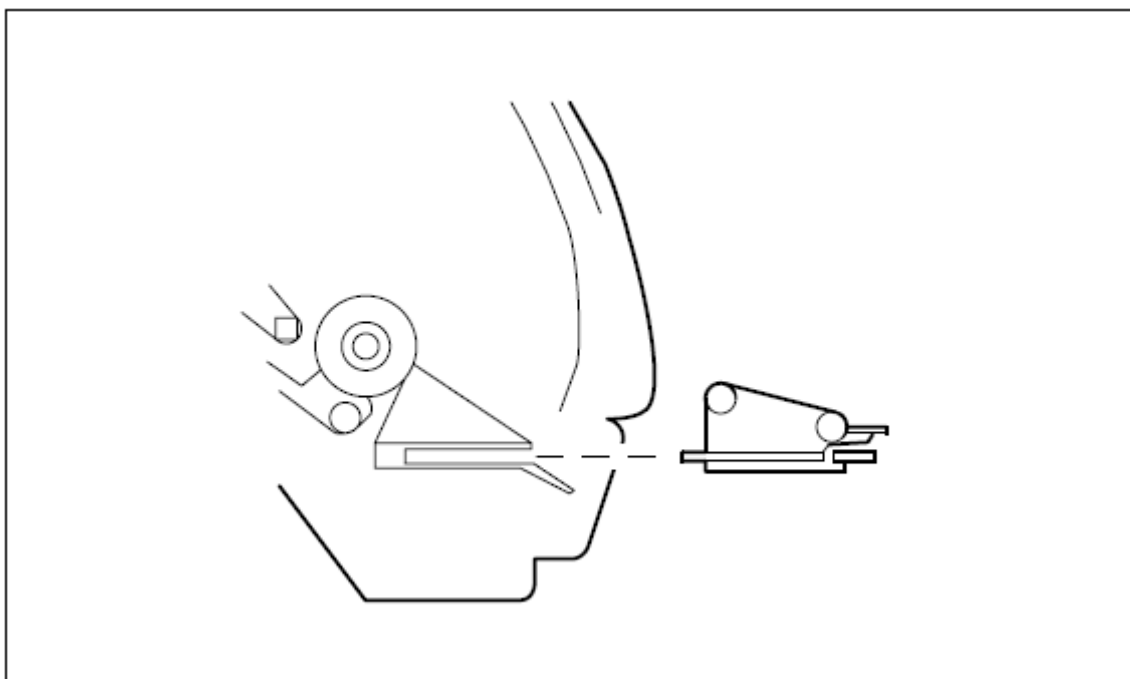

Reinstall the bottom cover and close the front cover.

NOTE * If you want to insert paper into tractor 1, you have to remove tractor 2 first.**

When powering the Printer back On, the printer will then recognize the installation, making it available within the menu.